


How to use your BRTRF Digital Room Thermostat

**BOSS
THERM™**


This leaflet gives you easy to follow instructions on how to use your BRTRF digital room thermostat.

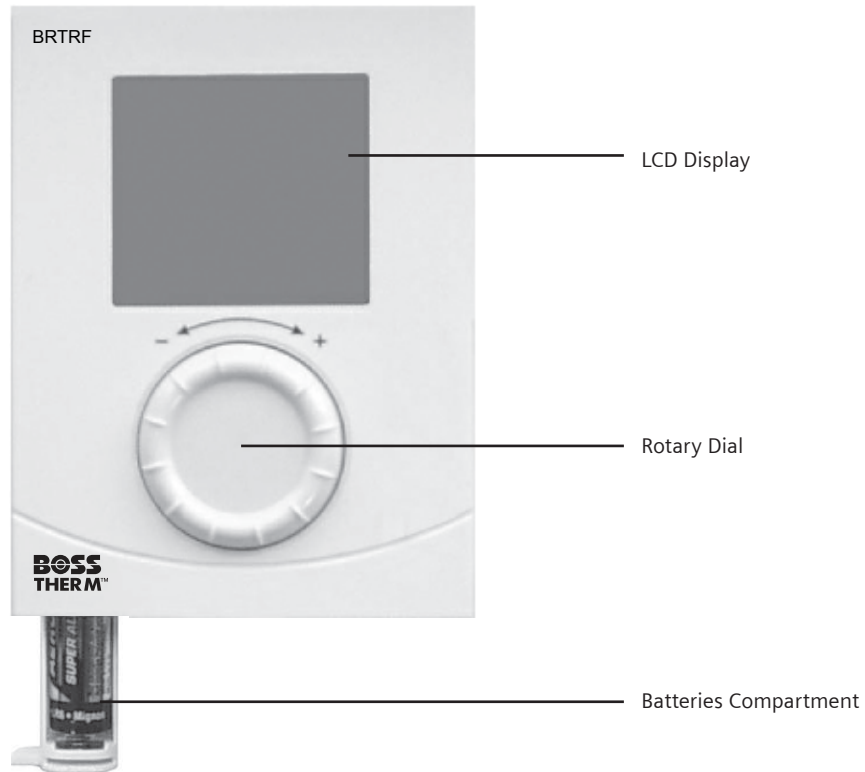

How do I set the required temperature?

Turn the rotary dial to the left to decrease the required temperature, or to the right to increase the required temperature.

The required temperature is displayed next to the following symbol

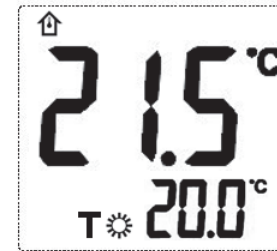

The RESET button on the back of the controller can be pressed to return the controller to the factory settings

Guide to symbols On LCD Display



Actual room temperature in °C



The selected temperature



Indicates there is a call for heat



Indication of low battery life, this signifies batteries must be replaced